



Assembly Diagram
 VK3FR 1220 &
 VK5FR 1220 & 1545
 Frame Bolted
 (welded on reverse side)

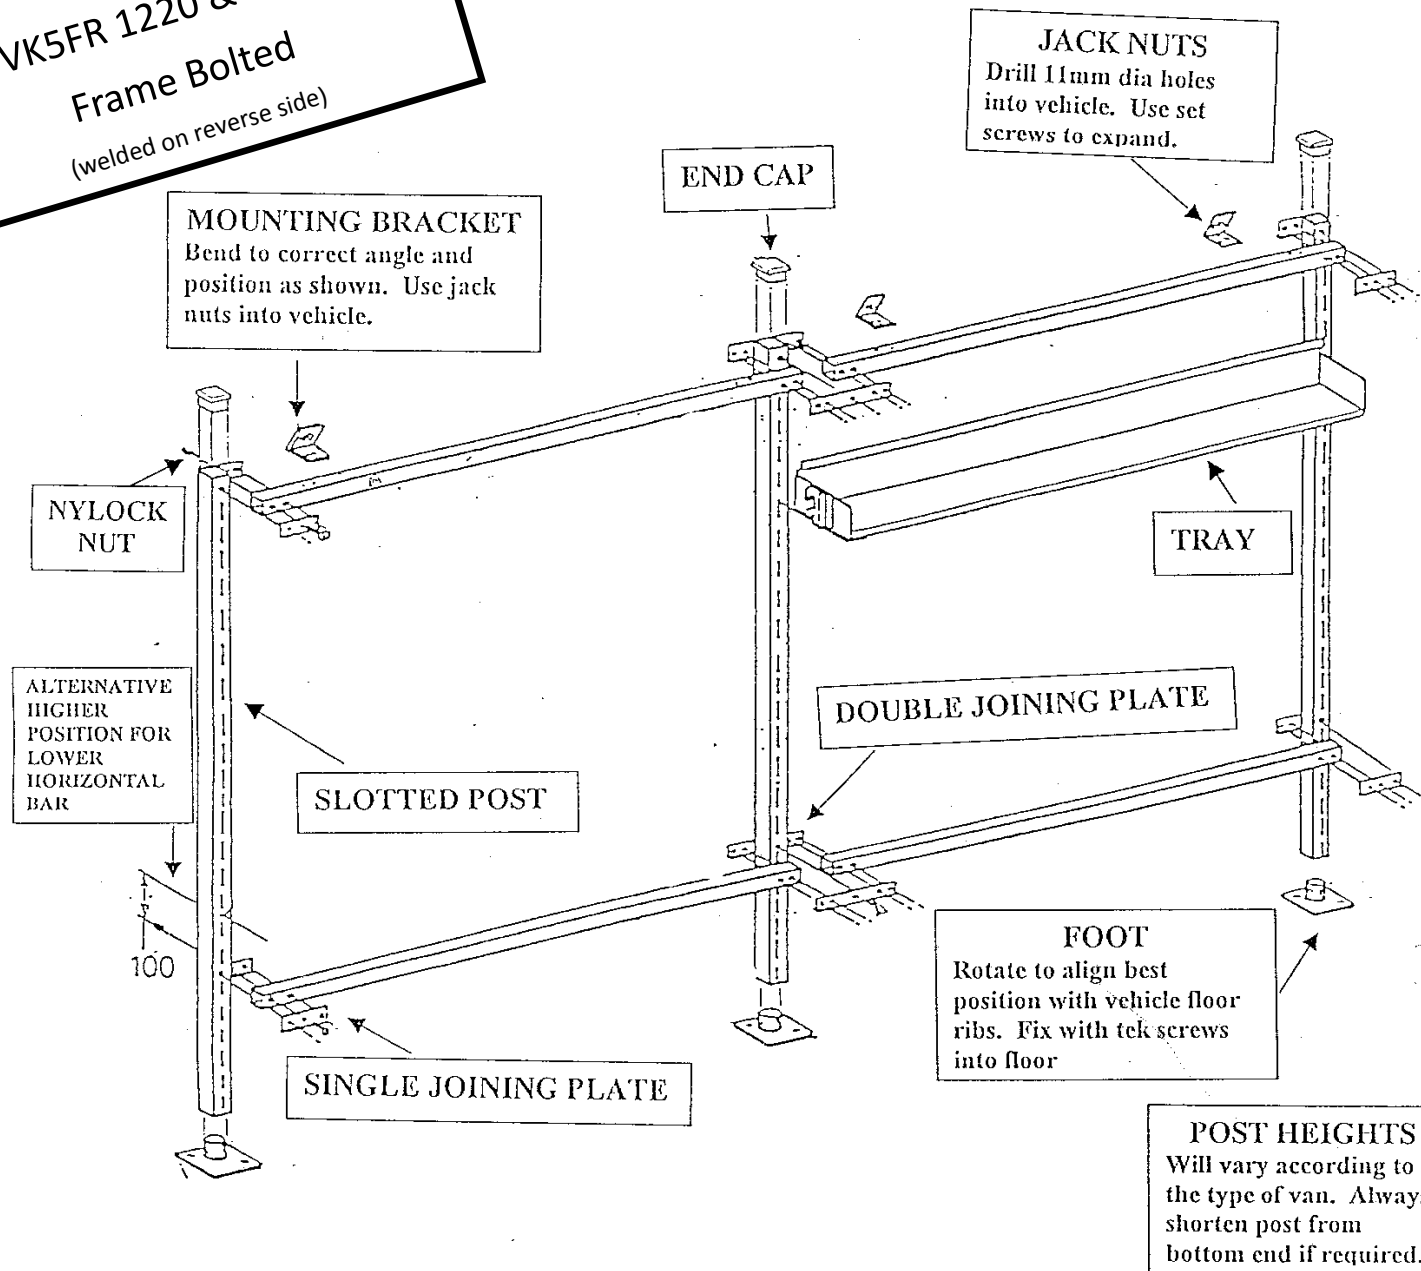

1. Assemble and bolt frame together using bolts and plates supplied.
2. Place frame in vehicle with feet in place.
3. Install top and bottom trays into frame to ascertain position of frame near the van wall.
4. Bend top mounting bracket to correct angle to suit your van.
5. Fix top bracket to the top horizontal bar.
6. Drill a pilot hole into the van wall, through the hole in the top bracket then drill an 10.5mm dia. hole.
7. Fix jack nut with bolt into the hole in the top bracket.
8. Push frame against the van wall, and in so doing push jack nuts into the holes in the van wall.
9. Tighten jack nuts.
10. Fix feet to floor of van.

Assembly Diagram
VK5FR 1120 & 1220
Frame Welded
(bolted on reverse side)

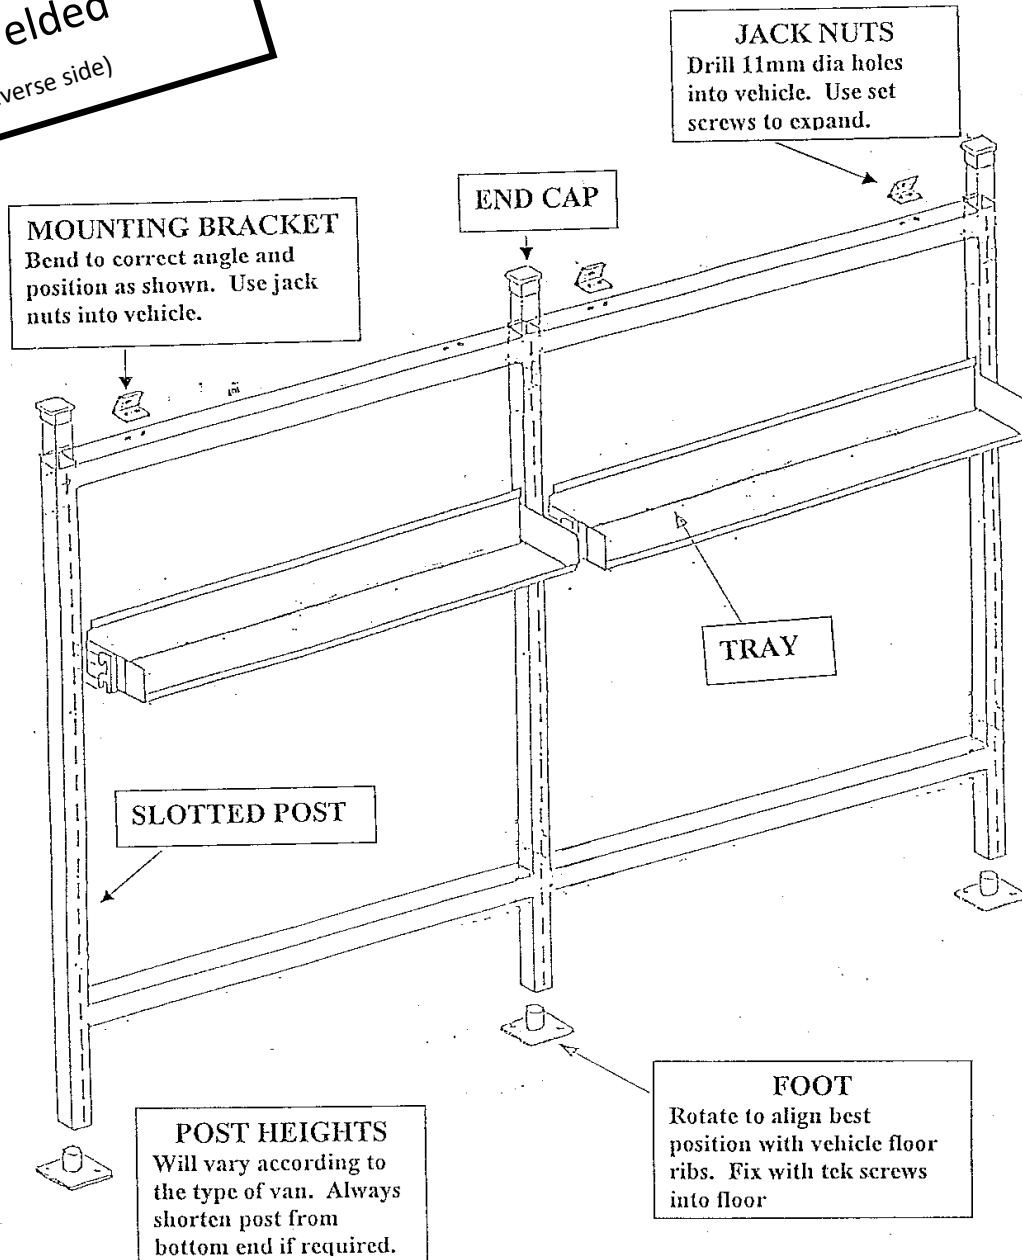

1. Place frame in vehicle with feet in place.
2. Install top and bottom trays into frame to ascertain position of frame near the van wall.
3. Bend top mounting bracket to correct angle to suit your van.
4. Fix top bracket to the top horizontal bar.
5. Drill a pilot hole into the van wall, through the hole in the top bracket then drill an 10.5mm dia. hole.
6. Fix jack nut with bolt into the hole in the top bracket.
7. Push frame against the van wall, and in so doing push jack nuts into the holes in the van wall.
8. Tighten jack nuts.
9. Fix feet to floor of van.